

PACK U2

FITTING INSTRUCTIONS

PACK CONTAINS: Expansion Vessel
Expansion Relief Valve
Check Valve

IMPORTANT

1. This Pack should be used if it is not possible to accommodate expanded water within the pipework to the Multipoint II heater. (Model Water Byelaw 91 refers.)
2. If the cold water mains supply exceeds 4.1 bar (60 psi) Accessory Pack U1 (Code Number 95.970.352) should also be used. Failure to do this will result in discharge from the Expansion Relief Valve.
3. These instructions should be read in conjunction with the Fitting and User Instructions supplied with the Multipoint II heater pack.

INSTALLATION

The controls must be installed in the cold water mains supply to the Multipoint II heater in the order shown in Figure 1.

The ½" BSP female drain on the Expansion Relief Valve must be connected to a discharge pipe via a discharge funnel (tundish). It is permissible to join the Expansion Relief Valve discharge pipe to that from the Temperature and Pressure Relief Valve (fitted to heater) to discharge into one discharge funnel.

The discharge pipe requirements are stated in the Fitting and User Instructions supplied with the Multipoint II heater.

Commissioning instructions are given in the Fitting and User Instructions supplied with the Multipoint II heater.

